



Folding Propellers

Propellers for FPV drones
Assembly, installation, inspection and maintenance
manual



Read the safety instructions in Chapter 1 before use. This product is intended for persons aged 14 and over.

Contents

1. Safety instructions

- 1.1 Before you start
- 1.2 Rotating propellers
- 1.3 A damaged propeller is dangerous

2. Product description

- 2.1 About the product
- 2.2 How to read the propeller designation
- 2.3 Materials

3. Orientation and direction of rotation

- 3.1 Leading and trailing edge
- 3.2 Which side faces up
- 3.3 Direction of rotation – CW and CCW

4. Assembly and installation

- 4.1 What you will need
- 4.2 Assembling the propeller
- 4.3 Mounting on the motor
- 4.4 Removal

5. Propeller inspection

- 5.1 Check after installation
- 5.2 Check before every flight and after every crash
- 5.3 When to replace a propeller

6. Maintenance and storage

7. Troubleshooting

8. Information for the EU and Czech Market

9. Warranty and rights arising from defective performance

1. Safety instructions

1.1 Before you start

- Read this entire manual before installation and first flight, and keep it for future reference.
- Propellers are spare parts for FPV drones and multicopters. This product is intended for **persons aged 14 and over**. Younger persons may only handle the product under adult supervision.
- Always use the propellers in accordance with the manuals for the drone, motors and flight controller (FC) they are intended for.

1.2 Rotating propellers

Propellers spin at very high speed in flight. A rotating propeller can cause **serious cuts and lacerations** and damage eyes or property. A broken-off blade or a loose propeller is thrown into the surroundings at high speed.

- **Always install and remove propellers with the drone switched off.** Motors can start unexpectedly, for example after an accidental Arm (motors enabled) or a configuration error.
- Carry out bench tests of the motors, configuration in the configurator (e.g. Betaflight) and checks of the direction of rotation **with the propellers removed**.
- When the drone is switched on, do not stay in the plane of rotation of the propellers, do not reach into their range and keep a distance from people and animals.
- Folded blades swing out sharply into the working position when the motor spins up, and their reach is the same as that of a fixed propeller.
- We recommend wearing safety glasses when working on the drone and during tests.
- Never try to stop a spinning propeller with your hand or an object.

1.3 A damaged propeller is dangerous

A propeller with a cracked, bent, broken or worn blade may disintegrate in flight. An unbalanced propeller also causes vibrations that stress the motor, bearings and flight controller and impair the drone's handling.

Never straighten, glue or grind a damaged propeller - always replace it with a new one.

2. Product description

2.1 About the product

Folding propeller for FPV drones, mainly for long-range drones and lifting platforms. It is made in **three-blade** and **two-blade** versions. The propeller is supplied disassembled and is assembled from individual blades and a two-part hub – triangular on three-blade propellers, oval on two-blade ones. The blades pivot in the hub: at rest they can be folded ①, and when the motor spins up, centrifugal force swings them out into the working position ②. The assembled propeller is fitted onto the motor shaft through its centre hole and secured with a nut. The propellers are supplied in pairs for both directions of rotation (CW and CCW).



Top: three-blade, bottom: two-blade propeller. ① Blades folded – at rest and during transport. ② Blades extended in the working position in flight.

2.2 How to read the propeller designation

Propellers are usually marked with a code that gives the diameter, pitch and number of blades. Two notations are used:

Notation	Example	Meaning
short code (up to 10")	1051-3	diameter 10", pitch 5.1", 3 blades
short code (from 11")	1307-3	diameter 13", pitch 7", 3 blades

- **Diameter** is determined by the drone frame – the propeller must fit into the frame with clearance from the arms, the other propellers and the drone body.
- **Pitch** is the distance the propeller would theoretically move forward in one revolution. A higher pitch means higher speed and a higher motor load, a lower

pitch means smoother flight and lower current draw.

- **Number of blades** – two-blade propellers are the most efficient (long flights), three-blade propellers are the most common compromise, more blades increase thrust on a small diameter.
- **Direction of rotation** – propellers are sold in pairs for both directions of rotation, see Chapter 3.3.
- The letter **F** in the designation (e.g. F1051 or 1307F) indicates the folding version.

2.3 Materials

The propeller blades are made of glass-fibre reinforced nylon.

- The material is stiff and strong, less flexible, and damps vibrations well.
- Typical damage is cracks, especially at the blade eye, and a chipped leading edge.
- Cracks are often hairline and hard to see – inspect the blades against the light.


None of the materials is unbreakable. Even a durable propeller loses its shape and balance after an impact – always inspect it after a crash according to Chapter 5.

3. Orientation and direction of rotation

The most common installation mistake is a **propeller fitted upside down** or a **propeller for the opposite direction of rotation**. The drone then flips over after Arm, does not take off or behaves unstably.

3.1 Leading and trailing edge

Each propeller blade has two edges. The **leading edge** ① is rounded, thicker and **sits higher** – it goes first when the propeller rotates and “scoops” the air. The **trailing edge** ② is thin, sharp and sits lower. The propeller pushes air ③ downwards, towards the drone frame.

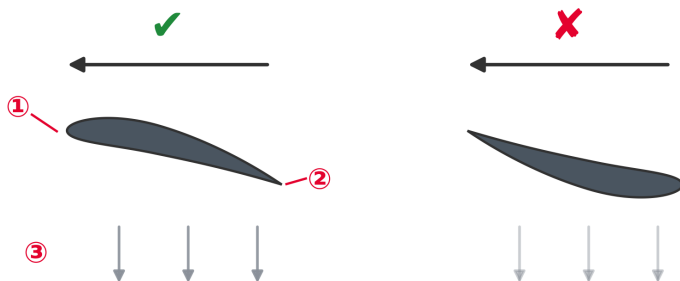

Cross-section of a propeller blade. The arrow at the top shows the direction of blade movement. Left: correct – the rounded leading edge ① leads, the trailing edge ② is at the rear. Right: propeller fitted upside down – the sharp trailing edge leads and the propeller produces almost no thrust.


3.2 Which side faces up

The propeller is fitted with the **convex side of the blades facing up** – away from the motor. The leading edges of the blades are higher than the trailing edges and, viewed from above, the rounded edge always leads in the direction of rotation.

- Usually the side with the moulded or printed model designation and the glossier surface also faces up. However, manufacturers do not guarantee this – **the shape of the blade is always decisive**.
- A propeller fitted upside down cannot be corrected by settings in the flight controller. Always remove it and turn it over.

3.3 Direction of rotation - CW and CCW

A quadcopter has two propellers rotating **clockwise (CW)** and two **counter-clockwise (CCW)**, viewed from above. Propellers for the two directions are mirror images of each other and are therefore supplied in pairs. A propeller for a CW motor fitted on a CCW motor pushes air upwards and the drone flips over after Arm.

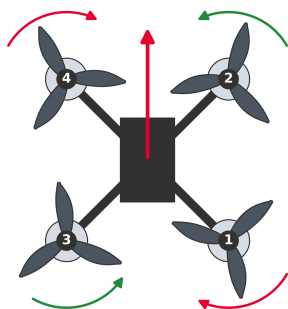

Top view, the arrow points forward. Betaflight default layout (Quad X, props in): motors 1 and 4 spin clockwise (CW, red), motors 2 and 3 counter-clockwise (CCW, green).

- In the Betaflight default setting the propellers spin **“inwards” (props in)** – the front blades move towards the centre above the nose of the drone.
- With the *Motor direction is reversed* option enabled (props out), all motors spin the opposite way and the propellers are fitted the other way round. This option does not change the motor direction itself – that is set in the electronic speed controllers (ESC) or by swapping the motor wires.
- Check the direction of rotation **with the propellers removed** in the configurator (*Motors* tab), and only then fit the propellers according to the actual direction.

► How to tell which direction a propeller is for

- ① **By the blade shape** – a reliable method for all manufacturers. Place the propeller convex side up: the blade rotates in the direction in which its higher, rounded leading edge points.
- ② **By the marking** – the model designation is moulded on the blades, on some versions also an arrow showing the direction of rotation. Blades for the opposite direction have a different marking (e.g. the letter R). If in doubt, the blade shape applies.


Before the first take-off, turn each propeller by hand in the motor's direction: it must push air down towards the frame.

4. Assembly and installation

4.1 What you will need

- propeller blades, two-part hubs and the screws joining them – for 13" and 15" propellers also washers,
- a screwdriver matching the hub screws,
- nuts for mounting the propeller on the shaft – supplied with the motors – and a matching spanner.

4.2 Assembling the propeller

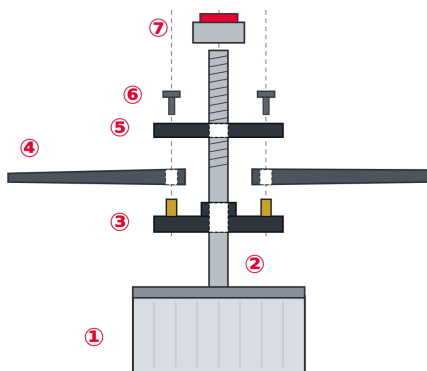

Exploded view: ① motor, ② shaft, ③ lower hub part with pivot pins, ④ blades with eyes, ⑤ upper hub part, ⑥ hub screws, ⑦ nut.

- ① Sort the blades by direction of rotation. All blades of one propeller must have the same marking – blades for CW and CCW must not be swapped or mixed.
- ② Fit the blades with their eyes onto the pins of the lower hub part. All blades must face the same side up, with the leading edge in the direction of rotation (Chapter 3).
- ③ Place the upper hub part so that it lines up with the lower part and insert the screws – with washers on 13" and 15" propellers.
- ④ Tighten the screws firmly but with feel. The blades must fold freely in the hub but must not have any up-and-down play.
- ⑤ Check that all blades swing out freely and evenly into the working position.

4.3 Mounting on the motor

- ① **Switch off the drone.**
- ② Check that the centre hole of the propeller matches the motor shaft – 5 mm on propellers up to 10", 6 mm on 13" and 15" propellers.

- ③ Fit the assembled propeller onto the shaft **the right way up** so that it rests on the motor seating surface.
- ④ Screw on the nut and tighten it firmly but with feel - an overtightened nut deforms the hub.
- ⑤ Repeat for the other motors and finally carry out the check according to Chapter 5.1.

Do not use thread-locking adhesives - they attack the plastic of the hub and make later removal impossible.

4.4 Removal

With the drone switched off, hold the motor, loosen the nut and pull the propeller off the shaft along the motor axis. Do not lever the propeller off against the motor bell with a screwdriver - you may damage the magnets or bearings.

5. Propeller inspection

5.1 Check after installation

- Turn each propeller by hand: it must rotate freely without rubbing against the frame, cables or camera, and the blade must not “wobble” up and down.
- Check that each propeller matches the direction of rotation of its motor (Chapter 3.3) and is the right way up (Chapter 3.2).
- Check that the nuts and the hub screws are tight.
- Check that all blades swing out freely and have no play in the hub.
- After the first installation or after replacing a motor, check the direction of rotation of the motors in the configurator **with the propellers removed**, and only then fit the propellers.

5.2 Check before every flight and after every crash

- Inspect both surfaces of each blade for cracks, burrs, bent or twisted tips and white stress marks in the plastic.
- Check the hub – it must not be cracked or deformed.
- Check that the nuts and hub screws are tight and that the blades move freely; they may loosen after a hard landing. Also check them after the first flights with new propellers and after transporting the drone.
- Listen during the first take-off – a change in sound or vibration in the camera image often reveals a damaged propeller.

5.3 When to replace a propeller

Always replace the propeller if:

- it has any crack, however small, or white stress marks in the material,
- part of a blade is missing or the blade is bent, twisted or frayed,
- the hub or a blade eye is cracked, or a blade has play in the hub,
- the drone vibrates after a crash and the vibration does not disappear after replacing the suspect propeller.

Do not replace a damaged blade or hub on its own – replace the whole propeller. Propellers are consumables and are routinely damaged in flight. Damage to a propeller caused by an impact in a crash or collision is not a product defect.

6. Maintenance and storage

6.1 Cleaning

Remove dust, grass and dirt from the blades with a dry or damp cloth. Do not use solvents, thinners or petrol for cleaning – they attack the plastic and may cause hidden cracks.

6.2 Storage

- Store in a dry place, out of direct sunlight and away from heat sources (e.g. a car dashboard in summer) – heat can deform the blades. In frost, plastics become more brittle and the propeller cracks more easily.
- Store the propellers loose or in their original packaging so that no other objects press on them. Constant pressure bends the blades. The blades may stay folded while carrying the drone.
- Keep out of the reach of children – sharp edges, nuts and small screws can be dangerous.

6.3 Balancing

Manufacturers of FPV propellers supply them balanced from the factory. If the drone vibrates even with new propellers, first look for the cause in the motor (bent shaft, worn bearings), the motor mounting or the flight controller settings. Do not balance propellers by sanding or adding glue – this weakens the blade.

7. Troubleshooting

Problem	Possible cause and solution
The drone flips over immediately after Arm and throttle up	A propeller is fitted on a motor with the opposite direction of rotation or is upside down. Check according to Chapter 3. Also check the direction of rotation and motor order in the configurator (without propellers).
The drone does not take off or has noticeably less thrust	A propeller is upside down – the sharp trailing edge is leading. Turn it the right way up.
Vibrations, jittery video, unusual noise	Damaged propeller, unevenly fitted blades or a blade for the opposite direction, loose nut, bent motor shaft. Check the assembly according to Chapter 4.2, tighten the nut, check the shaft.
A blade does not swing out or swings out stiffly	The hub screw is too tight or the blade eye is damaged. Loosen the screw so that the blade folds freely, or replace the propeller.
A blade has play in the hub	Loose hub screw. Tighten it; if the play remains, replace the propeller.
A propeller came loose or flew off in flight	The nut was not tightened sufficiently or has lost its locking function. Use a new self-locking nut.
The propeller rubs against the frame or cables	The propeller is too large for the frame, or cables, the antenna or camera are in the path of the blades. Reroute the cables or use propellers with a smaller diameter.

8. Information for the EU and Czech Market

8.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Rotorama, s.r.o.
Company ID (IČO)	051 57 692
VAT ID (DIČ)	CZ05157692
Registered office	Okrajová 1351, 674 01 Třebíč, Czech Republic
E-mail	info@rotorاما.cz
Phone	+420 252 252 098
Website	www.rotorاما.cz

8.2 Product safety and identification

- The propeller is not subject to EU harmonisation legislation requiring **CE** marking and therefore does not bear it. It is placed on the market in accordance with Regulation (EU) 2023/988 on general product safety (GPSR).
- **Product identification:** the model designation is moulded or printed on the propeller and stated on the packaging. The manufacturer and model can also be found on the product page in the e-shop.
- This product is **not a toy** and is intended for persons aged 14 and over.

8.3 Disposal

- The propeller is not electrical equipment – it is not subject to the take-back of electrical equipment and does not bear the crossed-out wheellie bin symbol.
- Dispose of damaged propellers in accordance with the plastic waste sorting rules of your municipality; if in doubt, dispose of them with mixed municipal waste.
- Dispose of the packaging in separate waste collection according to its material.

9. Warranty and rights arising from defective performance

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product. The importer's contact details are given in Chapter 8.1.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.